


Glue on Ratchet Lock Bar Instructions

The following instructions show proper installation for instances where the **Front Panel** of the sliding door is on the **Left** when in the locked position. If the sliding doors you are working on are in the opposite orientation then install the Glue-On Locking Bar 180° (upside down) relative to that shown in the image.


Caution:




Always wear the appropriate safety gear (gloves and eye protection) when working with and around glass.

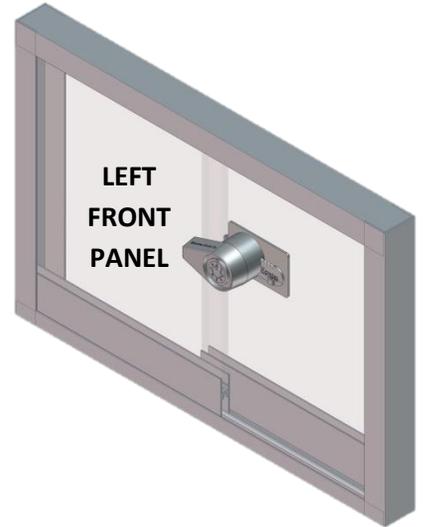

Step 1: Insert Bar into Ratchet Lock simulating the desired "locked position".

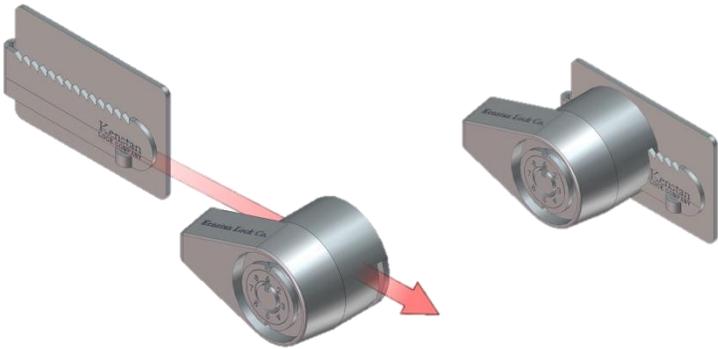


Step 2A: Test Fit the Lock on the glass. This is an important step to locate the lock when it is assembled onto the locking bar. Failure to do so may result in extra free play up to and beyond 1/8" after installation.

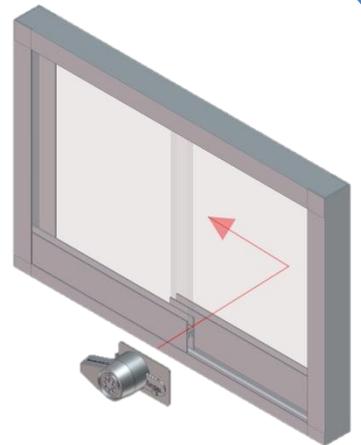

Step 2B: Notes for test fitting.


Minimizing overlap at the bend will maximize the strength of the locking bar!

The entire adhesive backed area must be positioned on the glass!

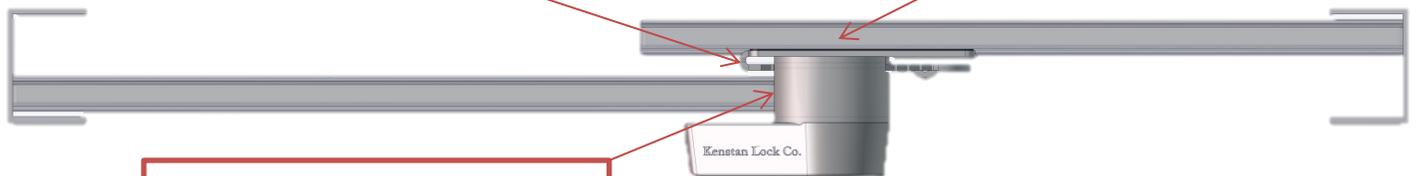


Install with minimal gap between locking surface and glass edge!

Step 3: Set the lock assembly aside and position the doors so you have access to the mounting location.


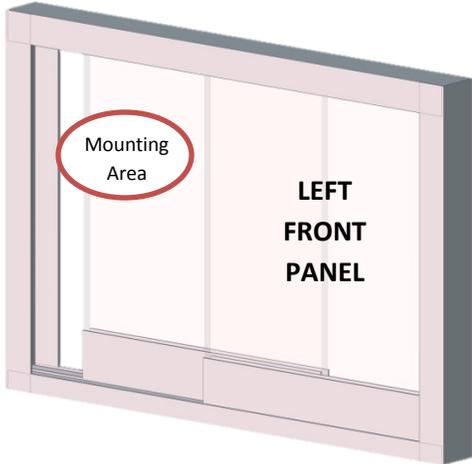


Step 4: Using the supplied alcohol wipe, thoroughly clean the mounting surface making sure to allow the surface to fully dry before proceeding. It will take a minimum of 5 minutes for the surface to be fully dry.



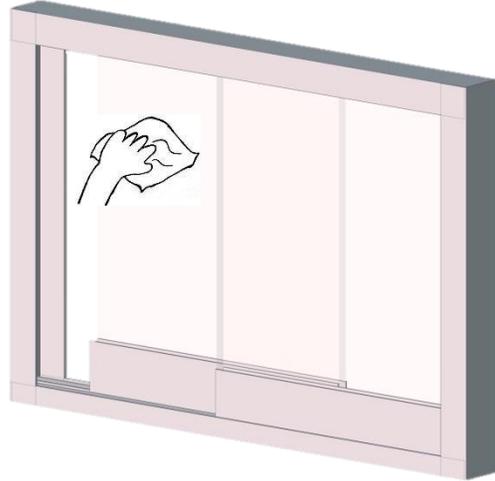


Step 5: IMPORTANT NOTE! The lock should still be assembled onto the lock bar as per Step 1 before proceeding with this step!


Remove backer from the adhesive on the locking bar and carefully place onto mounting surface. Once satisfied with the location press firmly on the locking-bar plate. (Do not apply direct pressure to the lock as this may bend the locking bar). Keep pressure for a minimum of 20 seconds.

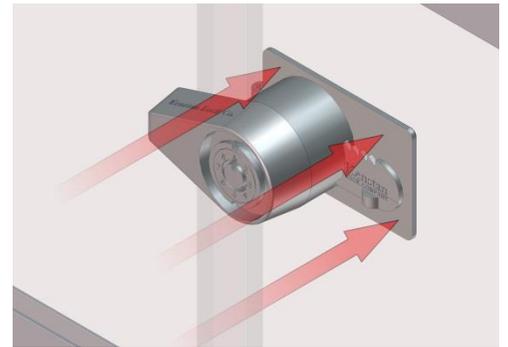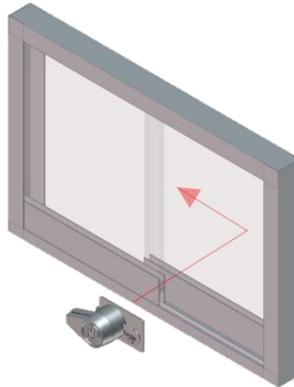

Step 6: Insert operating key and rotate 90° to the right to disengage the lock. Slide the lock and key assembly to the right to remove the lock (The adhesive may not be fully seated so be careful to slide directly to the right and not pull on the locking bar while removing the lock).

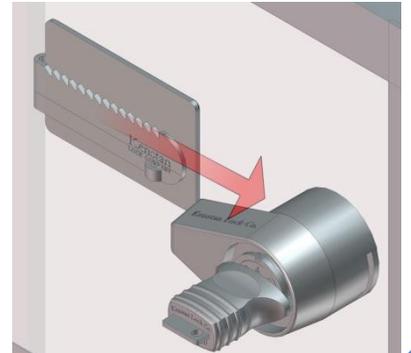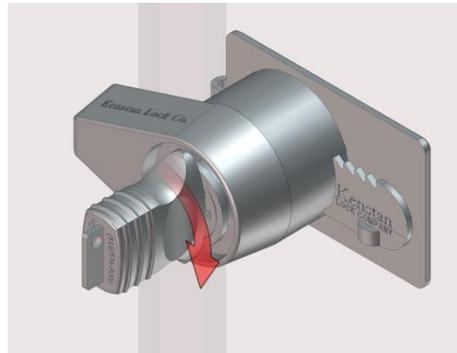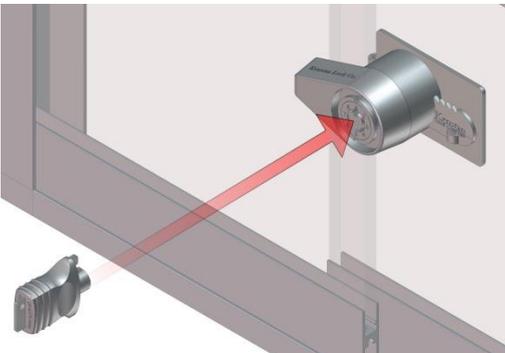

Step 7: Press firmly on the lock-bar plate for an additional 20 seconds. Although the adhesive should now be firmly set it is suggested to allow as much as 30 minutes to an hour of additional rest time before subjecting the locking bar to normal usage.

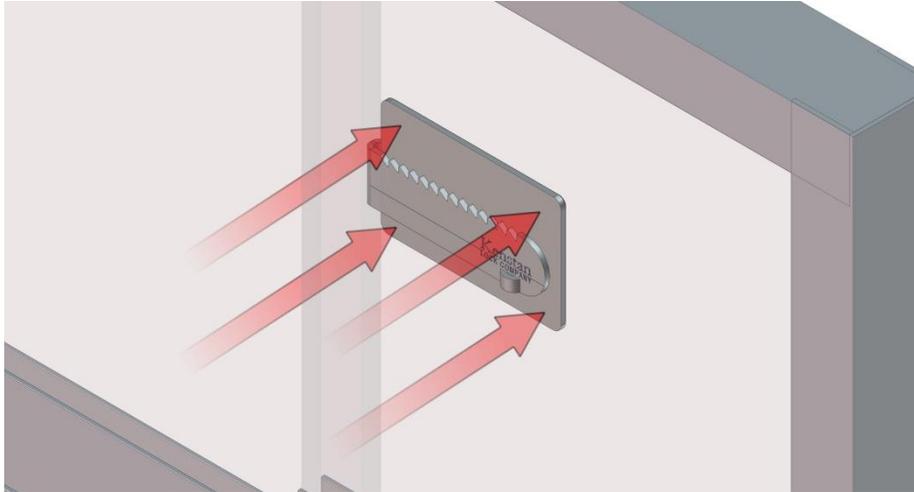

Step 8: Congratulations you have successfully installed the Glue-On ratchet lock bar. Slide the lock over the bar to secure the sliding doors.

